


View describing minimum space required to change levels with 90° Outside Vertical Angle Fitting and 45° Inside Vertical Angle Fittings.

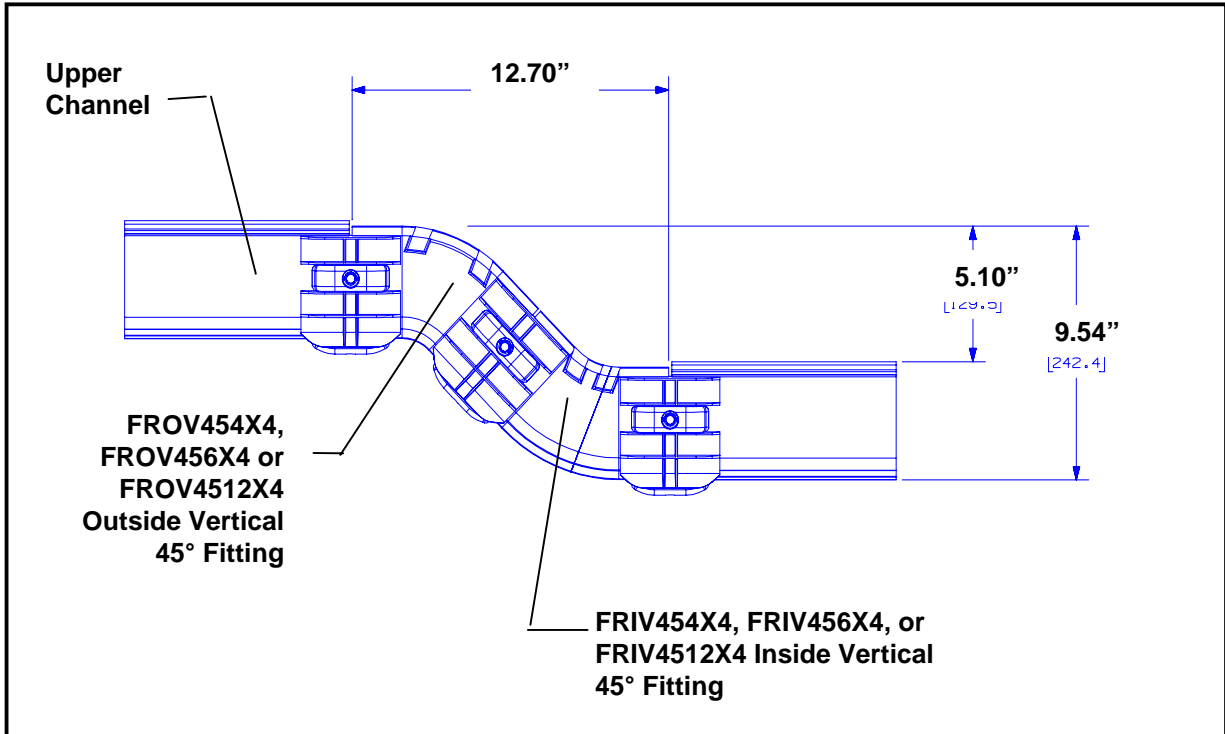

View describing minimum space required to change levels with 45° Outside Vertical Angle Fitting and 45° Inside Vertical Angle Fittings.